


# Instructions for Use



## Rubber Pipe Sleeve Kit

### The rubber pipe sleeve kit comprises:

- 1 x 10 meter roll 'FIPEC' double sided cold bonding tape
- 1 x Jubilee Clip
- 1 x Rubber pipe sleeve in your chosen material complete with flange
- 1 x Neoprene sponge strip
- 1 x Seam roller

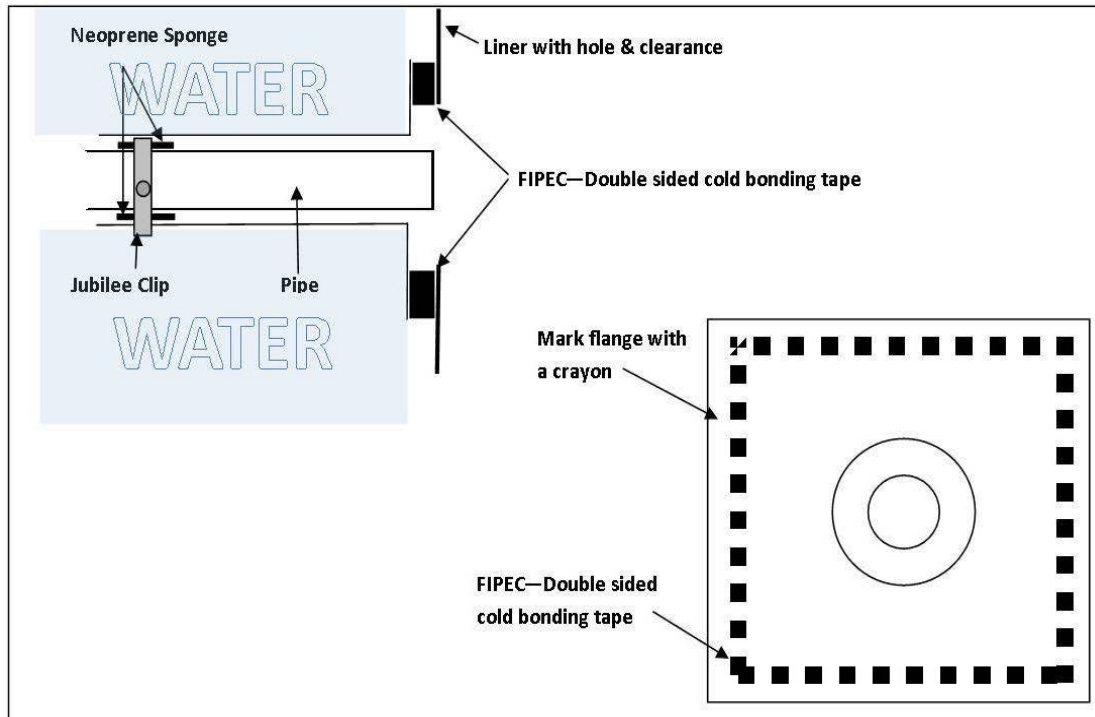

### Instructions

1. Cut a circle in the liner around the circumference of the pipe, leaving approximately 1" clearance.
2. Place the pipe sleeve over the pipe and offer the flange up to the liner, mark around the flange with a crayon.
3. Ensure that the liner is clean within the crayon border (a mild solvent such as Acetone or Toluene used sparingly with a cloth is suitable as a cleaning material). Apply the 'FIPEC' double sided cold bonding tape around the inside edge of the crayon border.
4. Remove the backing paper from the 'FIPEC' double sided cold bonding tape. Place the pipe sleeve over the pipe and press the flange firmly into the FIPEC tape all around the edge.
5. Using the seam roller, apply pressure all the way around to expel air and create a good bond.
6. Tighten the jubilee clip and pipe sleeve where the neoprene sponge is located.



### Butyl Products Ltd.

Lingfield House, 11 Radford Crescent, Billericay, Essex,  
CM12 0DW, United Kingdom. T: +44 (0) 1277 653 281  
F: +44 (0) 1277 657 921 E: [enquiries@butylproducts.co.uk](mailto:enquiries@butylproducts.co.uk)  
W: [butylproducts.co.uk](http://butylproducts.co.uk)